


Attn: Save this

For adjusting your headset in the future

- Your bike's headset was already properly adjusted at the factory -
Your are not likely to need more adjustment for a long while.
These instructions are for the future after many many miles of riding.

Tools for adjustment

Top cap

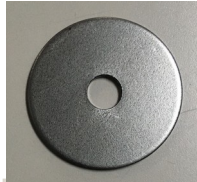

Long bolt



Aluminum tube



Star nut is
already inside
steer



Stage 1

5mm Allen wrench
with long bolt through
top cap



Aluminum tube fits over
steer after removing
handlebar stem and push
button



Make sure to
engage threads on
long bolt into star
nut already inside
steer tube



Stage 2

2nd Hand tighten
to manufacturers
headset pre-load
specifications
after you.....



1st Loosen the
clamp just above
the upper
headset cup that
the aluminum
tube is resting on



Stage 3

Make sure to re-tighten
the clamp. Then remove
the top cap, long bolt
and aluminum tube

Button



Re-install push
button before re-
installing your stem.
Ready to ride!

Clamp

