Novaire Suitcase Trailer Drilling Diagram

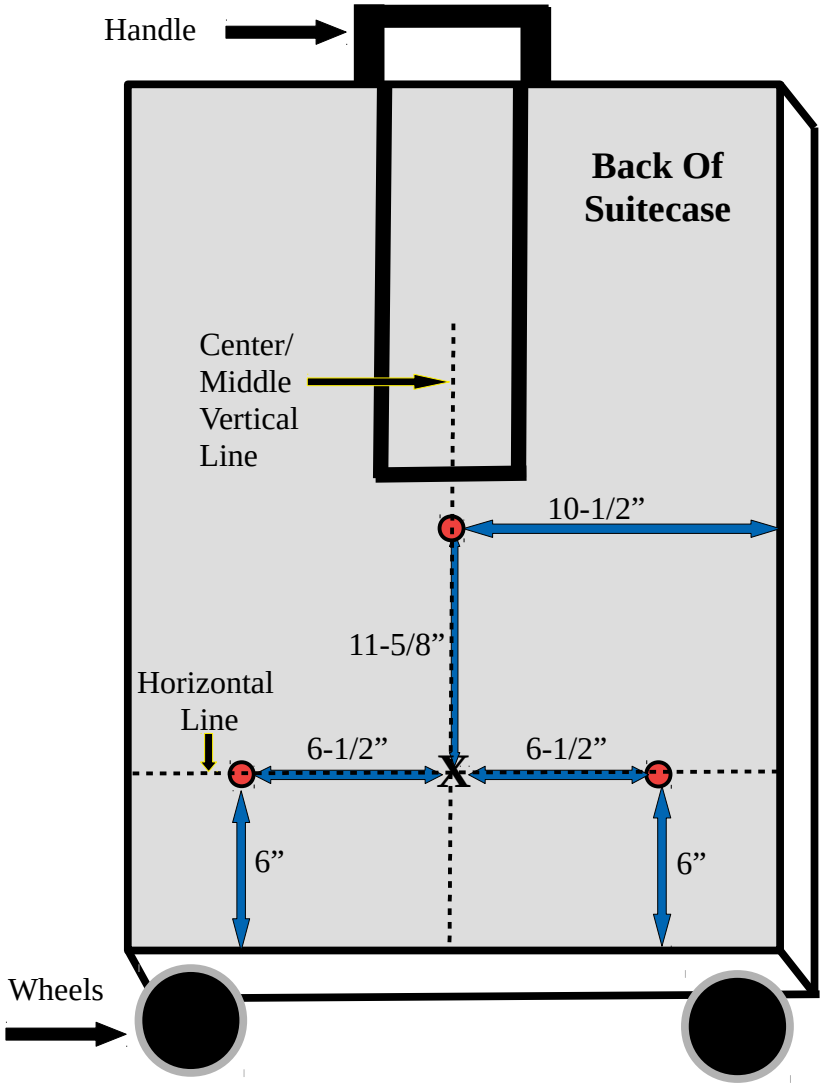

Instructions

1.) Measure up from the bottom edge of the outer backside (handle side) bottom of the suitcase 6” inches, and draw a horizontal line across the case.

2.) Measure 10-1/2” inches from the outer edge of the suitcase to find the center/ middle of the case. Mark with a vertical line intersecting the horizontal line below. This will be your center intersecting mark (X).

3.) From the intersecting mark (X), measure 6-1/2” left or right (horizontal) to find your drill hole marks (2).

4.) From the intersecting mark (X), measure 11-5/8” up/ vertical to find your drill hole mark (1).

5.) Once drill holes are marked, you can proceed to drill out the holes using a 5/16” inch drill bit.

6.) You can now attach your suitcase to your trailer using 3 bolts through the 3 drilled holes.

NOTE: When attaching the suitcase to the trailer, make sure the wheels of the suitcase are facing the opposite direction of the bicycle (Back).
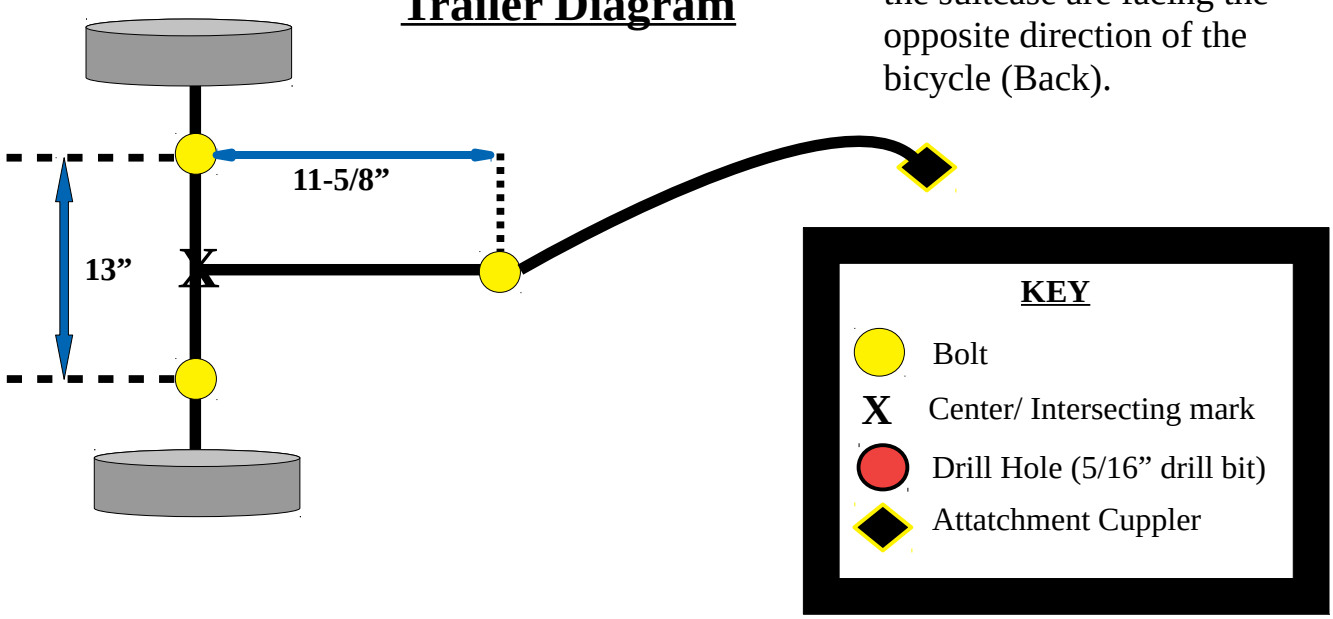
Trailer Diagram